


620 TERMINAL WAY • P. O. BOX 938 • COSTA MESA, CALIFORNIA 92627 • (714) 642-1163

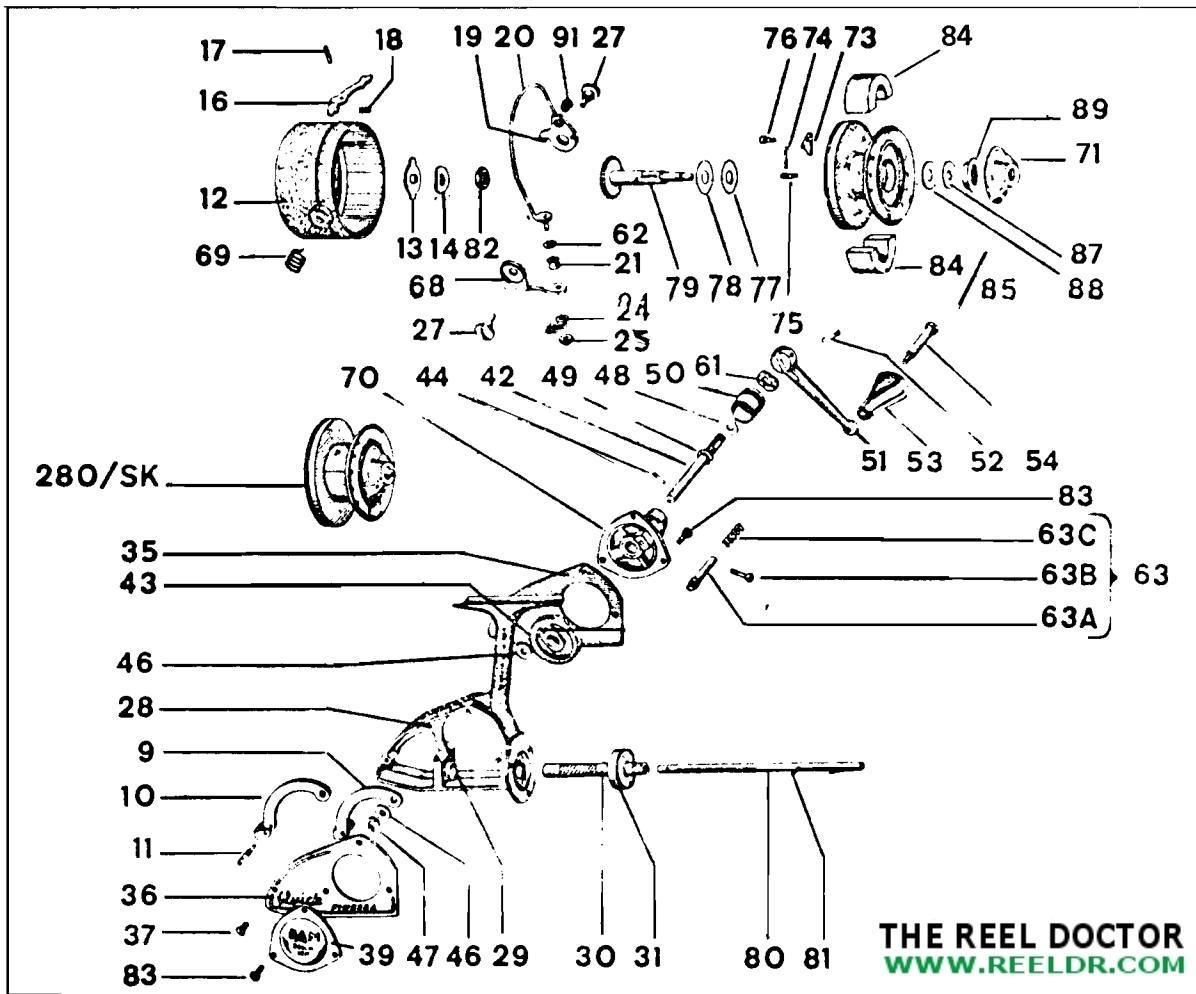

IMPORTANT: AN "N" SERIES QUICK SPOOL WILL NOT FIT THIS REEL.

FIG. NO.	PART NO.	DESCRIPTION	FIG. NO.	PART NO.	DESCRIPTION
9	100-504	Lever arm for left hand cranking	53	100-149	Handle grip
10	100-514	Lever arm for right hand cranking	54	100-051	Grip screw
11	100-505	Screw for lever arm	61	100-073	Spring ring for P/N 50 & 51
12	100-468	Flange with stop lever bearing	62	100-481	Plastic washer for P/N 21
13	100-107	Washer	100-010	100-010	Anti reverse clutch
14	100-070	Spring ring	63	100-011	Ball lever
16	100-470	Stop lever	63A	100-010	Anti reverse pin
17	100-472	Bearing pin	63B	100-011	Spring
18	100-474	Drag spring	63C	100-012	Angle lever
19	100-109	Rubber buffer	68	100-475	Ball spring
20	100-477	Pickup arm	69	100-061	Bearing cover
21	100-019	Line guide	70	100-444	Brake nut
24	100-069	Lock washer	71	100-488	Ratchet
25	100-482	Plain nut	73	100-014	Ratchet spring
27	100-476	Bearing screw	74	100-016	Stop pin
28	100-516	Housing - refer to 285/330 Schematic	75	100-017	Rivet
29	100-132	Bushing	76	100-015	Washer Resitex
30	100-179	Driving shaft	77	100-087	Washer, metal
31	100-176	Ball bearing	78	100-086	Brake spindle
35	100-465	Case cover, left	79	100-493	Axle - refer to 285/330 Schematic
36	100-464	Case cover, right	80	100-506	Pin
37	100-026	Half round screw for case cover	81	100-041	Hexagon nut
39	100-508	Plate cover	82	100-024	Screw
42	100-154	Driving axle	83	100-027	Cork ring (pair)
43	100-501	Screw wheel	84	100-495	Washer, metal
44	100-038	Pin for screw wheel	87	100-104	Washer, fiber
46	100-098	Washer for P/N 45	88	100-486	Plastic bushing
47	100-078	Spring ring for P/N 45	89	100-487	Cover cap
48	100-097	Washer for P/N 42	91	100-112	Spool box, plastic
49	100-072	Spring ring for P/N 42	280 SK	N/A - use 330 SK with 330 axle conversion noted on 285/330	
50	100-134	Handle nut	...		
51	100-185	Crank arm	100-515		
52	100-045	Pin for crank arm			