


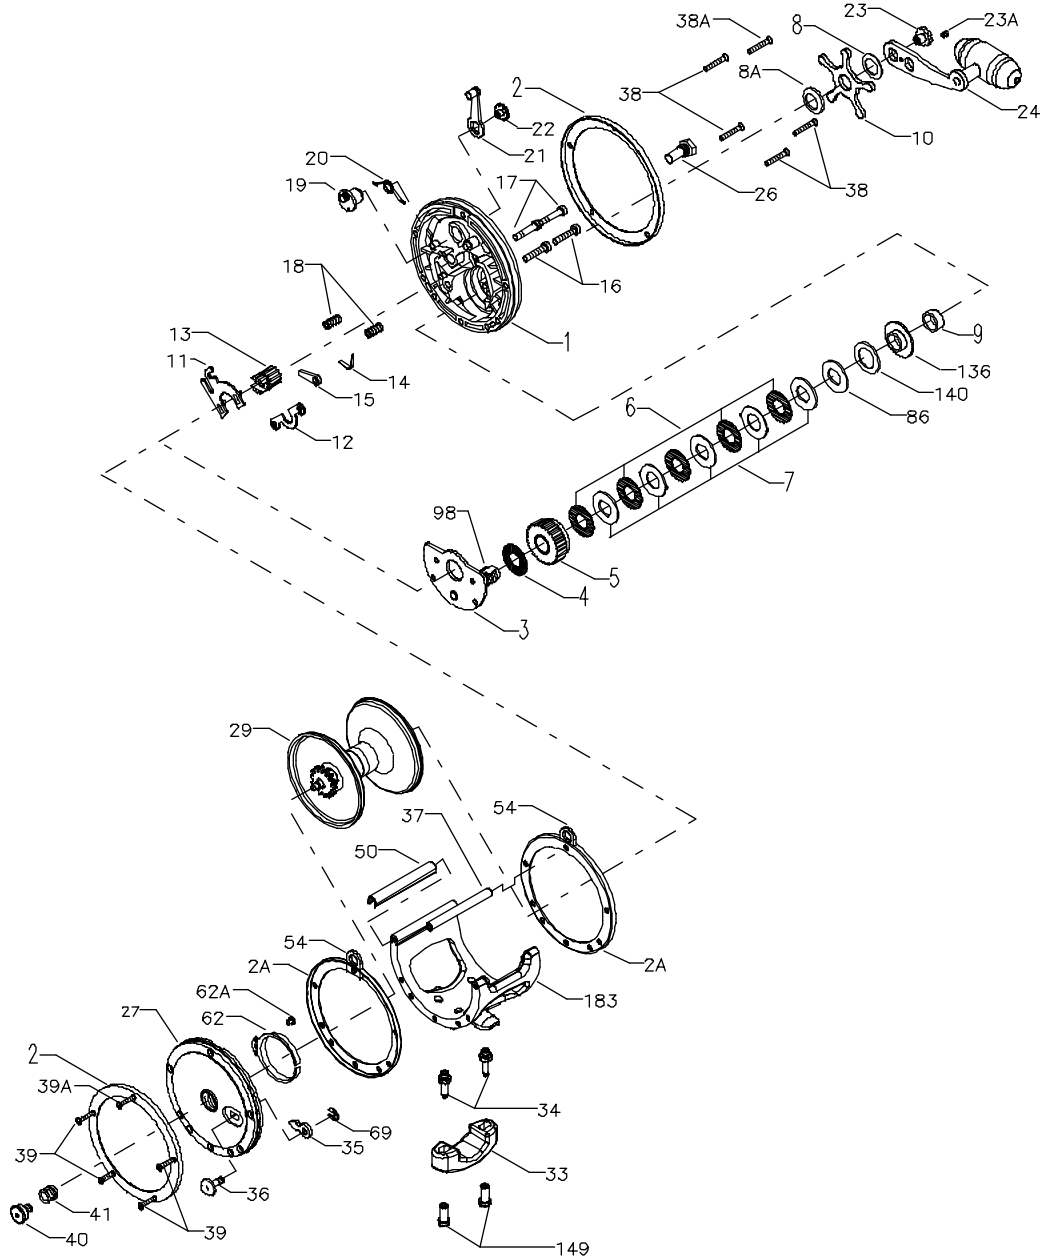

PARTS LIST FOR MODEL 114



KEY NO.	PART NO.	DESCRIPTION
1	001 114	Right Side Plate
2	002N114	Right Side Ring
2A	002 114I	Inner Ring
3	003 114	Bridge w/Sleeve
4	004 114	Fiber Washer
5	005 114	Main Gear
6	006 114	Drag Washer (5 req.)
7	007C114	Metal Drag Washer Set
8	008 114	Tension Spring
8A	008 115	Tension Spring
9	009N114	Spacing Sleeve
10	010 114	Star Drag Wheel
11	011 114	Eccentric Jack
12	012 114	Pinion Yoke
13	013 114	Pinion
14	014 114	Dog Spring
15	015 114	Dog
16	016 114	Lower Bridge Screw (2 req.)
17	017 114	Upper Bridge Screw (2 req.)
18	018 114	Clutch Spring (2 req.)
19	019 114	Eccentric
20	020 114	Eccentric Spring
21	021 114	Eccentric Lever
22	023 060	Eccentric Screw
23	023 116	Handle Screw
23A	110 060	Handle Lock Screw
24	024 057	Handle
26	026 114	R.S. Bearing
27	027 114	Left Side Plate
29	029L114	Spool
33	033 340	Rod Clamp
	*033R114	Ringed Rod Clamp (Optional)
34	034 975	Rod Clamp Screw (2 req.)
35	035 114	Click Tongue
36	036 114H	Click Button
37	037 114	Frame Post
38	038 114	R.S. Frame Screw (4 req.)
38A	039 012	R.S. Post Screw
39	039 114	L.S. Frame Screw (4 req.)
39A	032 021	L.S. Post Screw
40	040 114	Left Side Bearing
41	041 114	Bearing Spring
50	050 114HF	Frame Shield
54	054 114	Harness Lug (2 req.)
62	062 114	Click Spring
62A	063 209	Click Spring Screw
69	069B600	Retaining Ring
86	086 114L	Metal Drag Washer
98	098 114	Gear Sleeve
136	136 114	Pressure Plate Washer
140	140 114	Felt Washer
149	149 045	Rod Clamp Nut (2 req.)
183	183 114HF	Frame