



KEY NO.	PART NO.	DESCRIPTION
19	019 016S	Eccentric Cam
20	020 704	Spool Ball Bearing (2 req.)
21	021 016S	Eccentric Lever
22	022 109	Dog Spring Screw (2 req.)
23	023 016S	Handle Screw
24	024 016S	Handle Complete
26	026 040	Ball Bearing
27	027 016S	L.S. Plate
29	029L 016S	Spool
30	030 012LT	Stand
31	031 080	L.S. Plate Screw (4 req.)
32	110 050	Quadrant Screw (3 req.)
33	033 113	Rod Clamp
34	034 114HLW	Clamp Screw (2 req.)
34C	034C114HLW	Rod Clamp Screw w/Nut
35	035 080T	Click Tongue
36	036 050	Click Button
36A	036 700	Click Button Nut
36S	036S080ST	Click Button Cap
38	038 050	R.S. Plate Screw (4 req.)
39A	039A080S	Bridge Cover Screw (3 req.)
41	041 016S	L.S. Bearing Spring
46	046A704	Cam Housing Screw (2 req.)
50	050 016S	Gear Stud Shield
54	054 016S	Harness Lug (2 req.)
55	055 080ST	Ball Bearing
59	059 050	Slotted Washer
60	060 050	Backing Washer
62	018 060	Click Spring
63	063 349	Hold Down Screw (2 req.)
67	067 016S	Plunger Cap Retaining Ring
69	069 050	Locating Pin (2 req.)
69B	069B050	Retaining Ring (2 req.)
81	081 016S	Ratchet
81A	101 030	Ratchet Screw (4 req.)
95	095 080	Click Tongue Bushing
95A	095A020	Click Bushing Washer
95B	038 710	Click Bushing Nut
95C	095A050	Click Bushing Washer
98	098016S	Bridge Bushing
101	101 030	Drag Washer Screw (4 req.)
101A	101 050S	Coupling Plate Screw (3 req.)
110	110 050	Handle Lock Screw
110A	110A016S	Handle Locking Plate
117	117 016S	Drive Plate w/Drag Washer
118	118 080	Stand Screw (4 req.)
119	119 030S	Coupling Plate
124	124 016S	Bridge Cover
125	125 030S	Cam Housing
134	134 016S	Gear Stud
141	141 016S	Cam Follower
142	142 050	Cam Follower Pin (2 req.)
143	143 030	Adjusting Screw
144	144 016S	Preset Knob
149	149 045	Rod Clamp Nut (2 req.)
156	156 016S	Drag Cover
161	161 050	Locating Pin Bushing (2 req.)
162	162 050	Locating Pin Spring (2 req.)
171	171 016S	Plunger
172	172 016S	Plunger Cap
172A	172A016S	Shifting Ball (2 req.)
173	173 050S	Gear Retainer (2 req.)
183	183 016S	Tube Frame

KEY NO.	PART NO.	DESCRIPTION
1	001 016S	R.S. Plate Assembly
2	002 016S	Quadrant Ring
4	004 030	Cam Thrust Washer
5H	005 016HS	Main Gear High Speed
5L	005 016LS	Main Gear Low Speed
6	006 155	Spacer Washer
7	007 016S	Metal Drag Washer
13	013 016S	Pinion Gear
14	014 016S	Dog Spring (2 req.)
15	015 050	Dog (2 req.)
18	018 020	Disc Clutch Spring (4 req.)
18A	018 349	Gear Stud Spring