


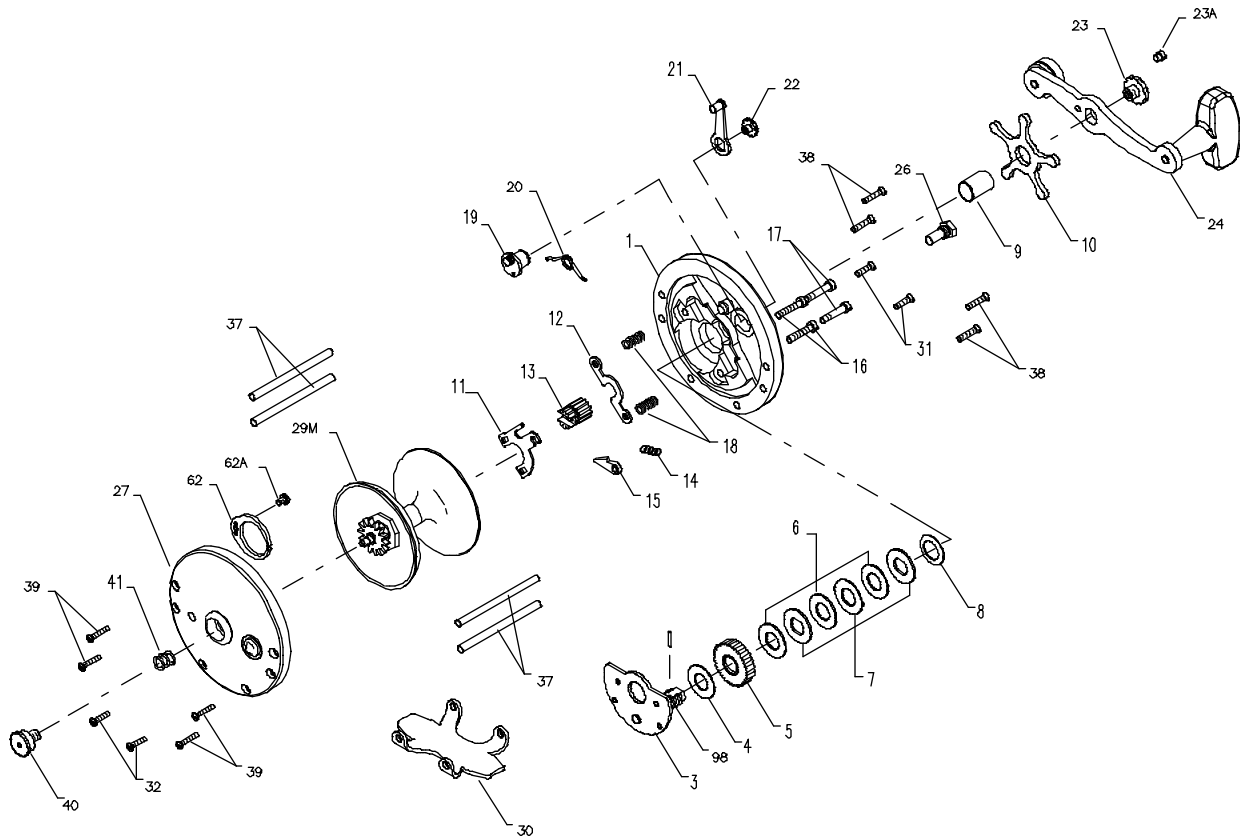

PARTS LIST FOR MODEL 285M



KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Right Side Plate	1-285	20	Eccentric Spring	20-60
3	Bridge w/Sleeve	3-66	21	Eccentric Lever	21-285
4	Fiber Washer	4-60	22	Eccentric Screw	22-60
5	Main Gear	5-60	23	Handle Screw	23-60
6	Drag Washer (3 req.)	6-60	23A	Handle Lock Screw	110-60
7	Metal Washer Set	7C-60	24	Handle	24-155
8	Tension Spring	8-60	26	R.S. Bearing	26-60
9	Spacing Sleeve	9-60	27	L.S. Plate	27-285
10	Star Drag Wheel	10-60	29	Spool	29M-60
11	Eccentric Jack	11-60	30	Stand	30-60
12	Pinion Yoke	12-60	31	R.S. Stand Screw	32-16
13	Pinion	13-60	32	L.S. Stand Screw	32-22
14	Dog Spring	14-99	37	Frame Post	37-60
15	Dog	15-99	38	R.S. Post Screw	38-8
16	Lower Bridge Screw	16-60	39	L.S. Post Screw	38-8
17	Upper Bridge Screw	17-60	40	L.S. Bearing	40-60
18	Clutch Spring	18-60	41	L.S. Bearing Spring	41-60
19	Eccentric	19-60	98	Gear Sleeve	98-60