



KEY NO.	DESCRIPTION
1	Housing
3	Dog Screw
4	Dog
4A	Silent Dog
5	Click Dog Spring
6	Drag Washer-HT100
6A	Upper Eccentric
6B	Upper Eccentric Liner
6C	Silent Eccentric Screw
6D	Eccentric Spring
6E	Anti-Reverse Lever
6J	Silent Dog Lever
6L	Silent Eccentric
7	Pinion Bushing
8	Main Gear
9A	Standard Drive Screw
10	Ratchet
15	Handle
15B	Standard Pivot
15BL	Left Hand Pivot
15C	Pivot Screw
16	Collar
16A	Eccentric Screw (2 req.)
17	Seal Washer
19	Pinion
19A	Pinion Spacer
20	Bearing
20A	Bearing
21	Bearing Cover
22	Spool Click Screw
23	Bearing Cover Screw (3 req.)
24	Bail Wire
27	Rotor
31	Bail Arm Screw
32	Bail Arm Spring
34	Bail Arm

PART NO.
1-650
3-750
4-650
4A-650
5-704
6-155
6A-650
6B-750
6B-704Z
6D-710
6E-750
6J-750
6L-650
*7-750
8-650
9A-650
10-650
15-650
15B-650
15BL-650
15C-650
16-650
16-910
17-650
19-650
19A-650
20-700
20-722
21-750
22-750
23-750
24-750
27-650
31-750
32-750
34-750

KEY NO.	DESCRIPTION	PART NO.
34A	Bail Arm Bushing	34A-750
35	Line Roller	35-750
35A	Roller Sleeve	35A-704
36	Bail Stud Screw	36-750
36A	Lock Washer	36A-750
37	Rotor Washer	37-650
38	Rotor Nut	38-710
39	Crosswind Shaft	39-650
43	Crosswind Block	43-750
43A	Crosswind Block Plate	43A-750
44	Crosswind Block Screw (2 req.)	44-750
44A	Trip Bumper Screw	44-750
45	Housing Cover	45-650
46	Housing Cover Screw (3 req.)	46-750
47	Spool (Complete)	47-650
48	Click Tongue	48-750
48A	Click Tongue Washer	48A-750
49	Click Tongue Spring	49-710
50	Bail Spring Cover Screw	50-712
51	Retaining Ring	51-650
52	Drag Knob	52-650
56T	Drag Washer (Teflon ®)	56T-650
57	Drag Washer (Keyed) Small Dia.	57-650
58	Drag Washer (Octagon)	58-650
60	Thrust Washer	60-750
132	Roller Washer	132-750
224	Transfer Lever	224-650
225	Crosswind Shaft Bushing	225-750
226	Bushing Cap Screw	226-750
227	Bail Spring Cover	227-750
231	Crosswind Gear	231-650
232	Bearing Cover (Open)	232-650
233	Bearing Cover (Closed)	233-650
234	Transfer Lever Screw	234-750
236	Trip Bumper	236-750

*Not Shown