

PARTS LIST FOR THE LEVEL WIND REEL SERIES

Key Number	Description	Part Number				
		9	109	209	210	309
1	Right Side Plate	1-9	1-109	1-209	1-210	1-309
2	Right Side Ring	2-109	2-109	2-209	2-209	2-309
3	Bridge	3-9	3-109	3-155	3-210	3-309
4	Washer (Fibre)	4-155	4-155	4-155	4-60	4-60
5	Main Gear	5-109	5-109	5-155	5-500	5-500
6	Washer (Fric. Matl)	6-155	6-155	6-155	6-309	6-309
7	Washer (Metal Set)	7-155	7-155	7-155	7-500	7-500
8	Tension Spring	8-60	8-60	8-60	8-60	8-60
9	Spacing Sleeve	9-60	9-60	9-60	9-60	9-60
10	Drag Star	10-180	10-180	10-60	10-60	10-47
11	Eccentric Jack	11-9	—	11-155	11-155	11-60
12	Pinion Yoke	12-9	—	12-155	12-155	12-60
13	Pinion Gear	13-9	13-109	13-155	13-140	13-60
14	Dog Spring	14-9	14-109	14-99	14-500	14-99
15	Dog	15-9	15-109	15-209	15-210	15-309
16	Bridge Screw (Lower)	16-9	16-60	16-60	16-60	16-60
17	Bridge Screw (Upper)	17-9	—	17-60	17-60	17-60
18	Clutch Spring	18-9	—	18-60	18-60	18-60
19	Eccentric	19-9	9-109	19-209	19-209	19-60
20	Eccentric Spring	20-109	20-109	20-155	20-155	20-601
21	Eccentric Lever	21-109	21-109	21-202	21-285	21-309
22	Eccentric Screw	22-109	22-109	22-60	22-60	22-60
23	Handle Screw	23-60	23-180	23-60	23-60	23-60
24	Handle (Complete)	24-160	24-109	24-155	24-66	24-66
26	Right Side Bearing	26-9	26-109	26-155	26-1134	26-60
27	Left Side Plate	27-9	27-109	27-209	27-210	27-309
28	Left Side Ring	28-109	28-109	28-209	28-209	28-309
29	Spool (Alum.) Complete	—	—	—	29L-210	—
	Spool (Metal) Complete	29M-9	29M-109	29M-209	29M-210	29M-309
30	Stand	30-109*	30-109*	30-66*	30-66*	30-66*
31	R.S. Stand Screw	32-2	32-2	32-22	31-210	32-16
32	L.S. Stand Screw	32-2	32-2	32-22	32-22	32-16
33	Rod Clamp	—	—	33-200	33-200	33-200
34	Clamp Scr. W/Nuts	—	—	34-200	34-200	34-200
35	Click Tongue	35-155	35-155	35-155	35-155	35-60
36	Click Button	36-60	36-109	36-209	36-209	36-209
37	Frame Post	37-109	37-109	37-209	37-209	37-65
38	Post Screw	39-1	39-1	38-8	38-8	38-8
39	Post Screw	39-1	39-1	38-8	39-6	38-8
40	L.S. Bearing	40-109	40-109	40-60	40-60	40-60
40A	L.S. Bearing Cup	—	—	—	40A-210	—
41	L.S. Bearing Spring	41-109	41-109	41-60	—	41-60
42	Worm	42-109	42-109	42-209	42-209	42-209
43	R.S. Worm Bearing	43-9	43-109	43-109	43-109	43-109
44	L.S. Worm Bearing	43-109	44-109	44-109	44-109	44-109
44A	Worm Bearing Spring	—	57-109	57-109	57-109	57-109
45	Worm Gear	45-109	45-109	45-209	45-209	45-209
46	Line Guide & Carriage	46-9	46-109	46-209	46-209	46-209
47	Pawl	47-109	47-109	47-109	47-109	47-109
48	Pawl Cover Screw	48-109	48-109	48-109	48-109	48-109
50	Worm Shield	50-109	50-109	50-209	50-209	50-209
55	Spool Bearing	—	—	—	55-113H	—
58	Slotted Post	58-109	58-109	58-209	58-209	58-209
62	Click Spring	62-209	62-155	62-209	62-309	62-309
63	Click Spring Screw	63-209	—	63-209	63-209	63-209
64	Idler Gear	64-9	—	64-209	64-209	64-309
65	Idler Gear Screw	65-209	—	65-209	65-209	65-209
66	Level Wind Drive Gear	66-9	66-109	66-209	66-209	66-209
67	Drive Gear Lock Spring	67-9	—	67-209	67-209	67-209
103	Bearing Cup - R.S.	—	—	—	103-113H	—
110	Handle Lock Screw	110-60	—	110-60	110-60	110-60
126	Pinion Gear Ring	—	—	—	126-200	—

*Specify Fresh or Salt Water