
7EBCO PS05

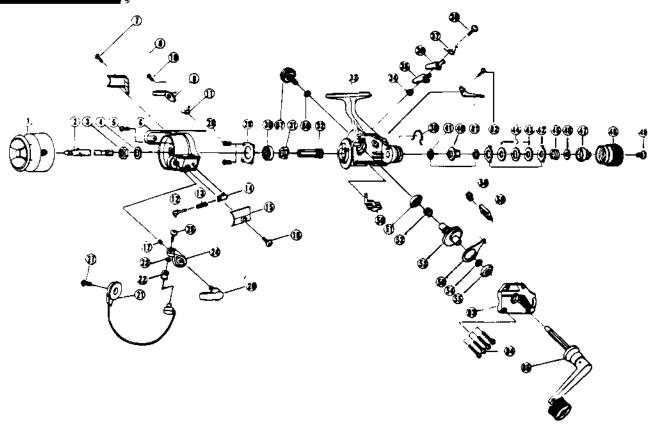

KEY	PART		KEY	PART	
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	RL321	SPOOL ASSY.		RL061	STOPPER SPRING
2	RL315	MAIN SHAFT ASSY.	38	RLOB3	STOPPER SCREW
3	RL006	ROTOR MUT	39	RL033	DRAG CLICK CLAW
4	RL065	ROTOR 'D' WASHER		RL075	METAL
	RL094	ROTOR NUT LOCK SCREW		RL038	DRAG 'B' WASHER - 1
6	RL009	ROTOR		RLO30	DRAG 'A' WASHER
7	RL085	COVER/CLICK CLAW SCREW		RLQ39	DRAG 'B' WASHER - 2
8	RL024	KICK LEVER COVER		RL066	DRAG 'D' WASHER
9	RLO19	KICK LEVER		RL043	DRAG COIL SPRING
10	RL037	KICK LEVER SCREW		RLO46	DRAG ADJUSTING WASHER
	RLQ49	KICK LEVER SPRING		RLO29	DRAG NUT
	RLO31	SPRING SHAFT			DRAG CAP
	RL022	BAIL SPRING			DRAG CAP SCREW
	RL020	SPRING HOLDER		RLO59	STOPPER LEVER
	RL087	BAIL SPRING COVER		RL013	BODY/BODY COVER BUSHING
	RL085	COVER/CLICK CLAW SCREW		RL086	SILENT CAM
	RLO34	E-CLIP		RLO12	DRIVE GEAR
	RL115	TRIP LEVER		-RLQ26_	ORIVE GEAR ADJ. WASHER
	RL347	BAIL ASSY.		RLO13	BODY/BODY COVER BUSHING
		LINE ROLLER			O/S SLIDER
	RLQ17	BAIL COLLAR		RLO81	SLIDER PIN
		ARM LEVER			CLICK CLAW
		BAIL SCREW		RL085	COVER/CLICK CLAW SCREW
		BAIL HOLDER SCREW		RL023	BODY COVER
	RL080	BEARING PLATE SCREW		RL057	BODY COVER SCREW
	RL040	BEARING PLATE		RL318	HANDLE ASSY.
	RL028	BALL BEARING		RL076	HANDLE SCREW CAP WASHER
	RL060	RATCHET GEAR		RLO73	HANDLE SCREW CAP
	RLO11	PINION GEAR	68	RL082	KICK LEVER GUIDE
	RL001	BODY			
	RL091	STOPPER BUSKING			
	RL064	STOPPER 'A'			
36	RL063	STOPPER 'B'			

WWW.REELDR.COM

Prices subject to change without notice. Prices do not include postage and handling.

PLEASE ORDER BY PART NUMBER

Rev. 11/90

Zebco Division Brunswick Corporation, Box 270, Tulsa, OK 74101 USA 918-836-5581

