



Key No.	Part No.	Description
1	SL321	SPOOL ASSY.
2	SL315	MAIN SHAFT ASSY.
3	RL006	ROTOR NUT
4	RL065	ROTOR 'D' WASHER
5	RL094	ROTOR NUT LOCK SCREW
6	SL009	ROTOR
7	RL085	COVER/CLICK CLAW SCREW
8	SL024	KICK LEVER COVER
9	SL019	KICK LEVER
10	RL037	KICK LEVER SCREW
11	RL049	KICK LEVER SPRING
12	RL031	SPRING SHAFT
13	RL022	BAIL SPRING
14	RL020	SPRING HOLDER
15	SL087	BAIL SPRING COVER
16	RL085	COVER/CLICK CLAW SCREW
17	RL034	E-CLIP
20	RL115	TRIP LEVER
21	SL347	BAIL ASSY.
22	SL004	LINE ROLLER
23	SL017	BAIL COLLAR
24	SL007	ARM LEVER
25	SL108	BAIL SCREW
27	RL051	BAIL HOLDER SCREW
28	SL080	BEARING PLATE SCREW
29	RL040	BEARING PLATE
30	RL028	BALL BEARING
31	RL060	RATCHET GEAR
32	SL011	PINION GEAR
33	SL001	BODY
34	RL091	STOPPER BUSHING
35	RL064	STOPPER 'A'

WWW.REELDR.COM

Key No.	Part No.	Description
36	RL063	STOPPER 'B'
37	RL061	STOPPER SPRING
38	RL083	STOPPER SCREW
39	SL033	DRAG CLICK CLAW
40	RL075	METAL
41	SL038	DRAG 'B' WASHER - 1
42	RL030	DRAG 'A' WASHER
43	SL039	DRAG 'B' WASHER - 2
44	RL066	DRAG 'D' WASHER
45	RL043	DRAG COIL SPRING
46	RL046	DRAG ADJUSTING WASHER
47	RL029	DRAG NUT
48	SL032	DRAG CAP
49	RL079	DRAG CAP SCREW
50	RL059	STOPPER LEVER
51	RL013	BODY/BODY COVER BUSHING
52	RL086	SILENT CAM
53	SL012	DRIVE GEAR
54	RL026	DRIVE GEAR ADJ. WASHER
55	RL013	BODY/BODY COVER BUSHING
56	SL025	O/S SLIDER
58	SL081	PIN SLIDER
59	SL078	SLIDER STOPPER
61	RL068	CLICK CLAW
62	RL085	COVER/CLICK CLAW SCREW
63	SL023	BODY COVER
64	SL057	BODY COVER SCREW
65	SL318	HANDLE ASSY.
66	SL076	HANDLE SCREW CAP WASHER
67	SL073	HANDLE SCREW CAP
68	RL082	KICK LEVER GUIDE

Prices subject to change without notice. Prices do not include postage and handling. Some parts may not be available.

PLEASE ORDER BY PART NUMBER

Rev. 5/93

Zebco Division Brunswick Corporation, Box 270, Tulsa, OK 74101 USA 918-836-5581

