


QUANTUM[®] HYPERCAST HC3

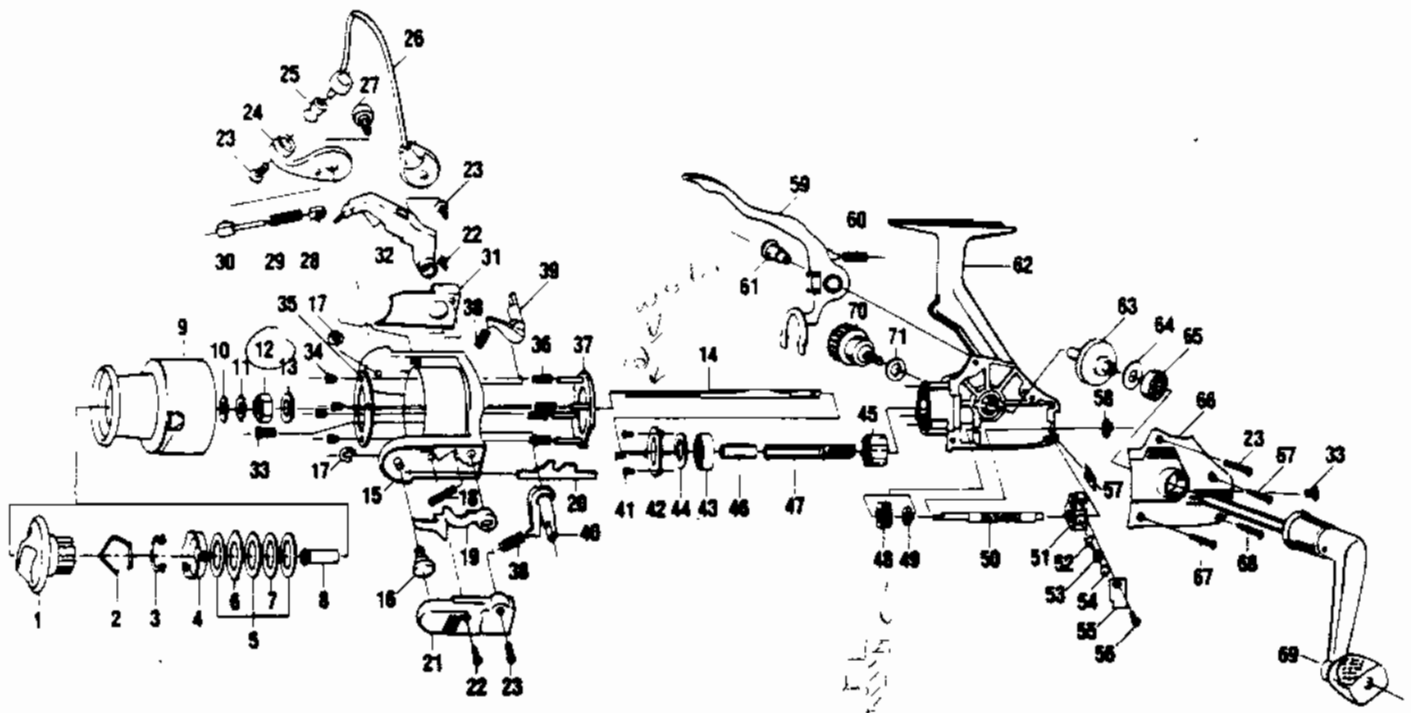

WWW.REELDR.COM

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	UQ332	Drab Knob Assembly	25	EQ004	Line Roller	49	UQ202	Bushing Washer (L)
2	AQ038	Spool Ring	26	UQ347	Bail Assembly	50	UQ201	Worm Shaft
3	AQ027	Drag Knob Click Claw	27	UQ051	Arm Lever Pin	51	UQ204	Pawl Holder
4	AQ050	Spool Retainer	28	UQ020	Bail Spring Holder	52	UQ207	Pawl
5	AQ033	Drag Washer B	29	UQ022	Bail Spring	53	UQ208	Collar - L/W Pawl
6	AQ029	Drag Washer A	30	UQ031	Bail Spring Shaft	54	UQ209	Washer - L/W Pawl
7	AQ046	Drag Washer D	31	UQ087	Bail Spring Cover	55	UQ205	Retainer - Pawl Holder
8	UQ160	Spool Sleeve	32	UQ397	Trip Link Assembly	56	UQ100	Screw - Main Shaft
9	UQ321	Spool Assembly	33	UQ057	Screw	57	UQ206	Retainer - Worm Shaft
10	BQ030	Spool Adj Washer	34	UQ123	Plate Screw	58	UQ203	Bushing Washer (R)
11	BQ037	Spool Click Gear	35	UQ118	Bail Plate	59	UQ352	Bail Trip Lever Assembly
12	QL006	Rotor Nut	36	UQ119	Shaft Spring	60	UQ117	Spring - B/T Lever
13	TL065	Rotor Retainer Washer	37	UQ351	Bail Plate Assembly	61	UQ116	Lever Shaft
14	UQ015	Main Shaft	38	UQ153 - 01	Link Shaft Spring	62	UQ301	Body
15	UQ009	Rotor	39	UQ151	Link Shaft Arm	63	UQ012	Drive Gear
16	UQ052	Bail Holder Pin	40	UQ152	Link Shaft Holder	64	AQ026-2	Washer
17	WX4665	E-Clip	41	UQ080	Bearing Plate Screw	65	EQ157	Body Cover Bearing
18	UQ049	Kick Lever Spring	42	UQ040	Bearing Plate	66	UQ023	Body Cover
19	UQ096	Link Holder	43	BQ028	Ball Bearing	67	AQ057-2	Screw
20	UQ019	Kick Lever	44	UQ110	Rotor Washer	68	KQ057-2	Screw
21	UQ024	Kick Lever Cover	45	UQ063	Clutch Bearing	69	UQ318	Handle Assembly
22	AQ085-2	Screw	46	KW052-2	Bearing Sleeve	70	UQ073	Handle Screw Cap
23	AQ108-2	Screw	47	UQ011	Pinion Gear	71	BQ105	Handle Cap Washer
24	UQ007	Arm Lever	48	UQ200	Level Wind Gear			

PLEASE ORDER BY PART NUMBER

Rev. 7/92

Zebco Division Brunswick Corporation, Box 270, Tulsa, OK 74101 USA 918-836-5581

