



Key No.	Part No.	Description	Key No.	Part No.	Description
1	HL321	SPOOL ASSY.	38	BT059	ANTI-REVERSE LEVER
2	BT315	MAIN SHAFT ASSY	39	BT068	CLICK CLAW
5	BT051	BAIL HOLDER SCREW	40	BT085	BAIL SPR. COVER SCREW
6	BT347	BAIL ARM ASSY.	41	BT104	SLIDER HOLDER
7	BT004	LINE ROLLER	42	BT030	REAR DRAG WASHER 'A'
8	BT017	SLIDING SCREW	43	BT039	REAR DRAG WASHER 'B'
9	BT007	ARM LEVER	45	BT066	CLICK GEAR
11	BT034	E-CLIP	46	BT043	REAR DRAG COIL SPRING
12	BT113	TRIGGER HOLDER	47	BT046	REAR DRAG ADJ. WSHR.
13	BT111	ARM LEVER CAP	48	BT112	REAR DRAG NUT
14	BT114	TRIGGER SPRING	49	BT029	SLIDING SCREW
15	BT115	TRIGGER	50	BT033	BACK CLICK CLAW
16	BT116	TRIGGER PIN	51	BT085	BAIL SPR. COVER SCREW
17	BT102	BAIL AXLE WASHER	53	BT132	REAR DRAG STOPPER
18	BT108	BAIL AXLE SCREW	56	HL032	REAR DRAG CAP
19	BT006	ROTOR NUT	57	BT079	DRAG SCREW
20	BT065	ROTOR RETAINER	58	BT013	BODY COVER BUSHING
21	BT022-QP	BAIL SPRINGS	59	BT091	A/R CLAW BUSHING
22	BT087	BAIL SPRING COVER	60	BT063	A/R CLAW (N)
23	BT085	BAIL SPR. COVER SCREW	61	BT064	A/R CLAW (S)
24	BT049	KICK LEVER SCREW	62	BT061	A/R CLAW SPRING
26	BT019	KICK LEVER	63	BT083	A/R CLAW SCREW
27	BT037	KICK LEVER SCREW	66	BT081	PIN SLIDER
28	BT024	KICK LEVER COVER	67	BT025	OSCILLATING SLIDER
29	BT085	BAIL SPR. COVER SCREW	70	BT012	DRIVE GEAR
30	HL009	ROTOR ASSY.	71	BT086	SLIDING SPRING
31	BT080	BEARING PLATE SCREW	72	BT026	CRANK GEAR SHIM
32	BT082	KICK LEVER GUIDE	73	HL323	BODY COVER ASSY.
33	BT040	BEARING PLATE	74	BT057	BODY COVER SCREW
34	RB028	BALL BEARING	76	HL318	HANDLE ASSY.
35	BT060	RATCHET GEAR	77	BT073	HANDLE SCREW CAP
36	BT011	PINION GEAR	78	BT120	ROTOR RET. SPRG. W/S
37	HL301	BODY ASSY.			

WWW.REELDR.COM

Prices subject to change without notice. Prices do not include postage and handling. Some parts may not be available.

PLEASE ORDER BY PART NUMBER

Rev. 5/93

Zebco Division Brunswick Corporation, Box 270, Tulsa, OK 74101 USA 918-836-5581

