


# ZEBCO RX20

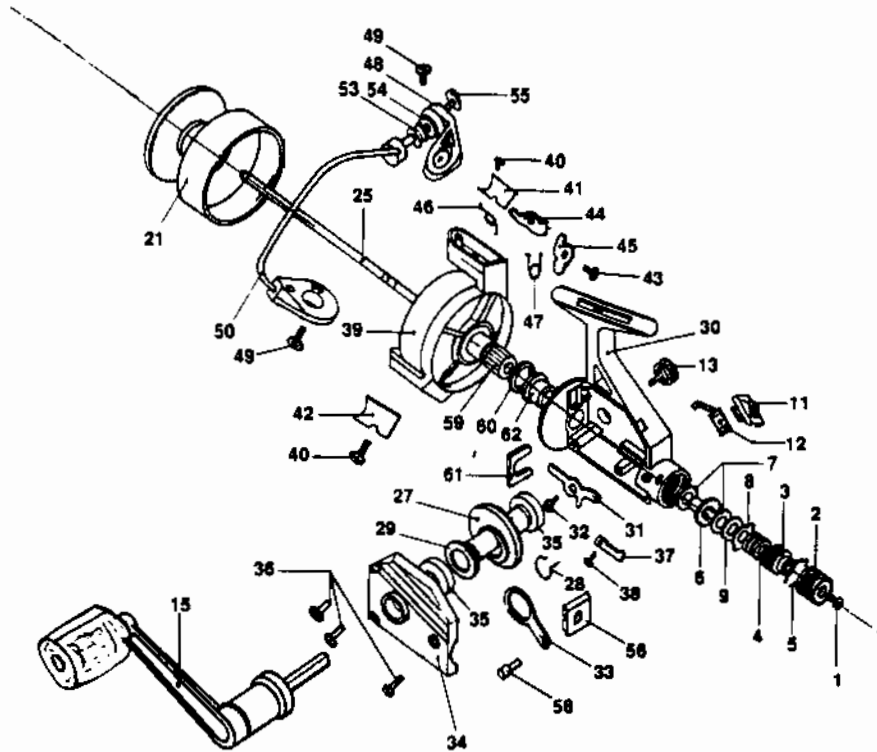

[WWW.REELDR.COM](http://WWW.REELDR.COM)

Key No.	Part No.	Description	Key No.	Part No.	Description
1	JK079	Drag Screw	36	JK057	Side Plate Screw
2	JK032	Drag Nut	37	JK068	Click Claw
3	JK127	Pressure Sleeve	38	JK067	Click Claw Spring
4	JK128	Pressure Spring	39	JK009	Rotor
5	JK070	Safety Ring	40	JK085	Rotor Cover Screw
6	JK104	Drag Wheel	41	JK087	Rotor Cover (L)
7	JK030	Brake Disc A	42	JK024	Rotor Cover (S)
8	JK039	Notched Disc B	43	JK037	Stop Lever Screw
9	JK046	Brake Disc C	44	JK019	Stop Lever (L)
10	JK129	Lock Washer	45	JK018	Stop Lever (S)
11	JK059	Anti-Reverse Lever	46	JK049	Turning Spring
12	JK090	Anti-Reverse Spring	47	JK047	Stop Lever Spring
13	JK073	Handle Screw Cap	48	JK007	Angle Lever
15	JK318-1	Handle Assy	49	JK051	Angle Lever Screw
21	JK321-1	Spool Assy	50	JK347	Bail Assy
25	JK315	Main Shaft Assy	53	JK004	Line Roller
27	JK012	Drive Gear	54	JK016	Line Roller Washer
28	JK213	Drive Gear Spring	55	JK108	Line Roller Screw
29	JK026	Drive Gear Washer	56	JK081	Slide
30	JK301-1	Body Assy	58	JK084	Slide Screw
31	JK063	Anti-Reverse Pawl	59	JK011	Pinion Gear
32	JK089	A/R Pawl Screw	60	JK010	Pinion Gear Washer
33	JK025	Oscillator Guide	61	JK125	Rotor Holding Plate
34	JK323-1	Side Plate	62	JK126	Pinion Gear Bushing
35	JK013	Side Plate Bushing			

**PLEASE ORDER BY PART NUMBER**

Rev. 1/92

Zebco Division Brunswick Corporation, Box 270, Tulsa, OK 74101 USA 918-636-5581

