QUANTUM SS2

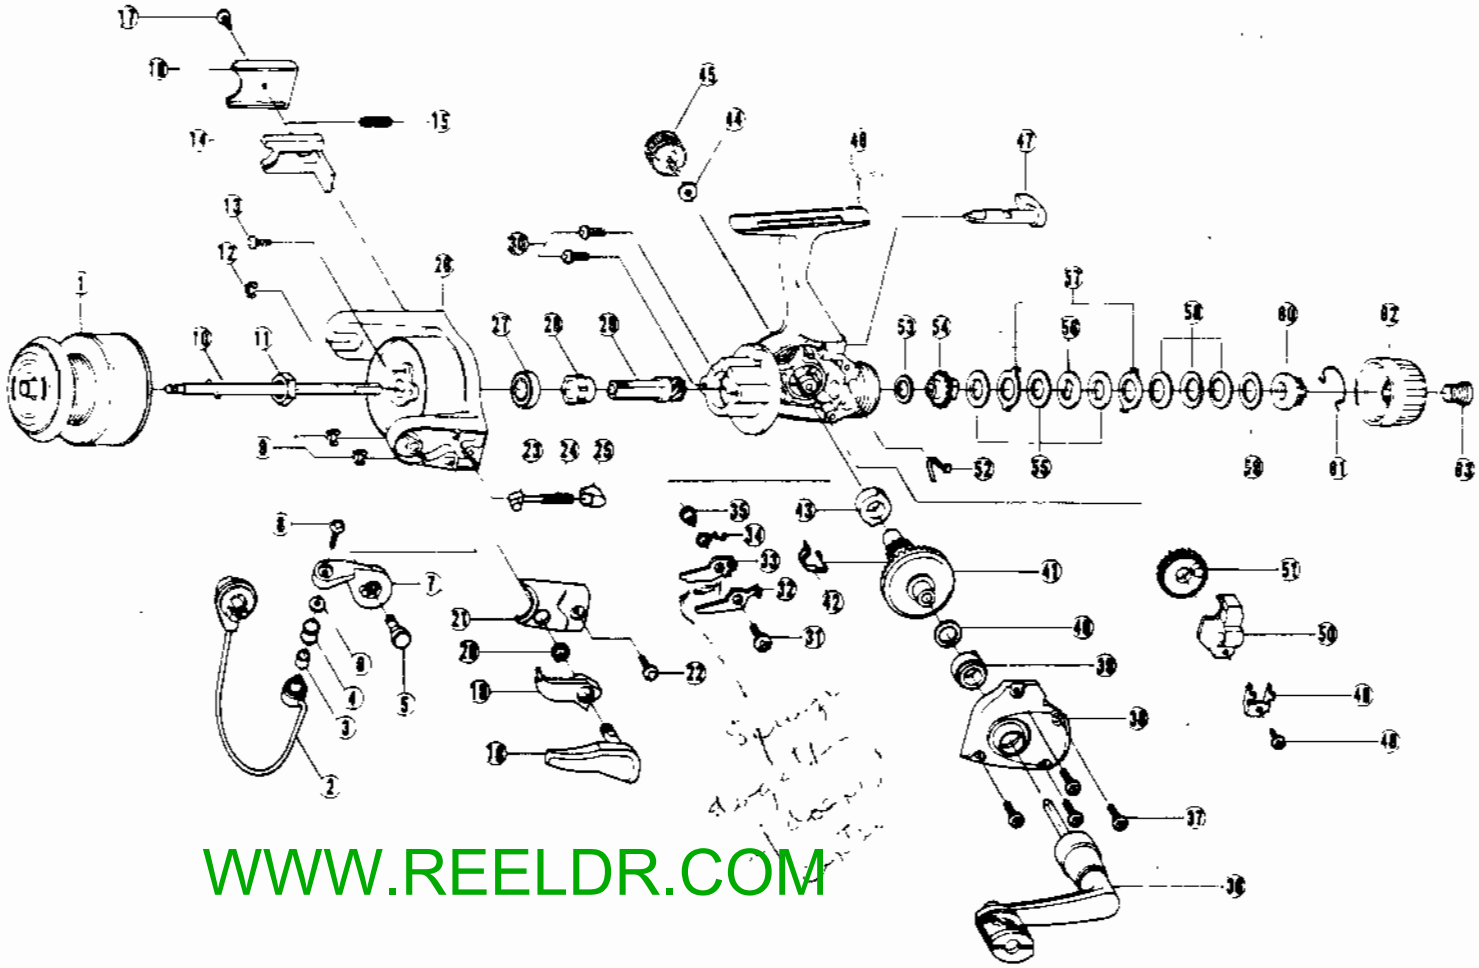

WWW.REELDR.COM

KEY NO.	PART NO.	DESCRIPTION
1	JU321-3	Spool Ass'y
2	GU347-5	Bail Ass'y
3	MT016-2	Line Roller Bushing
4	MT004	Line Roller
5	GU051-3	Arm Lever Pin
6	GU105-7	Line Roller Washer
7	JU007	Arm Lever
8	KQ108	Bail Screw
9	KQ034	"E" Clip
10	JU315-2	Main Shaft Ass'y
11	GU006	Rotor Nut
12	KQ034	"E" Clip
13	GU077-4	Rotor Nut Lock Screw
14	HU019	Kick Lever
15	KQ049	Kick Lever Spring
16	HU046	Kick Lever Cover
17	GU077-2	Kick Lever Cover Screw
18	GU115-2	Trip Lever Ass'y
19	GU097	Trip Link Ass'y
20	NL096	Trip Link Spring
21	HU087	Arm Lever Spring Cover
22	GU077-2	Arm Lever Spring Cover Screw
23	NL031	Spring Shaft
24	KQ049-3	Arm Lever Spring
25	QL020	Arm Lever Spring Holder
26	HU009	Rotor
27	AQ028	Ball Bearing
28	PL060	Ratchet Gear
29	GU011-2	Pinion Gear
30	GU077	Bearing Screw
31	GU077-5	Stopper Screw
32	GU063	Stopper "A"
33	GU074	Stopper "B"
34	GU061	Stopper Spring
35	GU091	Stopper Bushing
36	GU318-5	Handle Ass'y
37	GU057	Body Cover Screw
38	HU023	Body Cover
39	GU027	Body Cover Bushing
40	GU105-8	Drive Gear Adj. Washer
41	GU012	Drive Gear
42	GU086	Silent Cam
43	GU027	Body Bushing
44	GU105	Handle Cap Washer
45	GU073	Handle Screw Cap
46	HU001	Body
47	GU090	Stopper Lever
48	JU100	Oscillator Retainer Screw
49	HU078	Oscillator Slider Retainer
50	HU025	Oscillator Slider
51	HU053	Oscillation Gear
52	GU089	Stopper Lever Spring
53	GU105-22	Drag Friction Washer
54	HU075	Metal
55	GU105-23	Drag "B" Washer
56	HU080	Drag "D" Washer
57	HU081	Drag "A" Washer
58	HU043	Drag Spring
59	GU105-24	Drag Adj. Washer
60	HU066	Drag Nut
61	RL033	Drag Click Claw
62	HU032	Drag Knob
63	HU101	Drag Knob Screw

PLEASE ORDER BY PART NUMBER

Zebco Division Brunswick Corporation, Box 270, Tulsa, OK 74101 USA 918-836-5581

BRUNSWICK